

1	GENERAL	2
1.1	Scope	. 2
1.2	Application	
1.3	Objective of This Standard	
1.4	Referenced Documents	. 2
1.5	Definitions	
1.6	Risk Identification and Management	
1.7	Copyright	
1.8	Document Owner	. 4
2	SYSTEM REQUIREMENTS	5
2.1	Inverters and Installation Requirements	. 5
2.2	Operational Modes and Grid Protection Devices	. 5
2.3	Overvoltage Protection	. 6
2.4	Metering	. 6
2.5	Access	. 6
2.6	Interruptions / Temporary Disconnection from the Network	
2.7	Permanent Disconnection	
2.8	Signs or Labelling	
2.9	UPS Installations	. 7
3	THE CONNECTION PROCESS	8
3.1	Consumer Application for Connection	. 8
3.2	Approval Process	. 8
3.3	Retailer Contractual Agreement	
3.4	Connection	
3.5	After Connection	. 9
4	APPENDICES 1	10
4.1	Appendix A: Wiring Guidelines	10
4.2	Appendix B: Warning Tags for DG Circuits	11
	1 Switchboard Warning Signs11	
	2 Powerco Network Warning Signs11	
4.3	Appendix C: Application and Connection Process	
4.4	Appendix D: Connection of Distributed Generation of 10kW or less in tota	
4.5	Embedded Generation Plant & Commissioning Report	
4.6	Appendix E: Determining an installation's export capability / limitations	16
4.7	DOCUMENT REVIEW HISTORY:	17
E	DOWEDCO STANDARD DOCUMENT CHANGE DEGUEST	۱۵



1 GENERAL

1.1 Scope

This standard covers the implementation of micro embedded generation under either Part 1 or Part 1A of Schedule 6.1 of the Electricity Industry Participation Code.

Micro embedded generation is defined by Powerco as being embedded generation up to 10kW in in total.

This standard does not cover standby generators isolated from the network nor any other isolated generation.

Connection requirements for generators with capacity over 10kW are defined in Powerco's 393S012 *Distributed Generation Over 10kW Connection Standard*.

1.2 Application

This standard applies to all operators of embedded generation within the above-mentioned scope which is or is about to be connected to Powerco's electricity network. It should be applied in conjunction with the methodologies outlined in Powerco's 173S003 Distributed Generation Policy.

This standard is intended primarily for Consumers wishing to connect alternative energy generation systems such as solar panels, wind or micro hydro turbines to the Powerco network.

Since micro generation is usually derived from an intermittent source (e.g., solar, wind or hydro), the energy is rectified to DC. The DC bus then feeds into a grid-tied inverter which commutates the energy into AC and synchronises it to the utility line frequency.

Most micro embedded generation systems use little or no DC storage (e.g., batteries) as energy is imported or exported as required or available.

1.3 Objective of This Standard

The main objective of this standard is to provide a clear perspective of Powerco's protocol for the enquiry, approval, installation and connection of micro embedded generation.

This standard may also serve as an informative document for Consumers wishing to connect micro embedded generation to the network.

1.4 Referenced Documents

AS/NZS 4777.1:2016 Grid Connection of Energy Systems via Inverters Part 1: Installation requirements

AS/NZS 4777.2:2020 Grid Connection of Energy Systems via Inverters Part 2: Inverter requirements

AS/NZS 3000:2018 – Electrical Installations (AS/NZ Wiring Rules)

Safety Manual – Electricity Industry (SM-EI) Parts 1, 2 and 3, latest version

Electricity Industry Participation Code 2010

Electricity Act

Electricity (Safety) Regulations and pursuant Codes of Practice

100R001 Risk Management Framework

170S001 Powerco Permanent Disconnections – Electricity Network

173S003 Powerco Distributed Generation (DG) Policy (Refer Powerco website)

393S007 Powerco Electricity Network Connection Standard



1.5 Definitions

Certificate of Compliance (Electrical)

A form that provides a statement of compliance with Regulation 39 of

the Electricity (Safety) Regulations 2010.

Consumer / Customer

This term has the same definition and meaning as defined in the Electricity Act 1992, namely "...any person who is supplied, or who

applies to be supplied, with electricity."

DG Distributed Generation. A synonym for Embedded Generation.

Energy Retailer (of Electricity)

A person who supplies electricity to another person or persons for any purpose other than for resupply by the other person or persons; and

"electricity retailing" has a corresponding meaning.

Embedded Generation

Generation connected to a (Powerco) distribution network intended to supply within the local network. The term differentiates from generation which is directly connected to a transmission network intended to

supply at a regional or national level.

Grid For the purposes of this document, Powerco's network.

Grid-Tied Grid-Tied – An embedded generator electrically connected to, and

operating in parallel with the network.

ICP A point of connection on a local network or an embedded network which

the distributor nominates as the point at which a retailer will be deemed

to supply electricity to a consumer.

Inverter An electronic device intended to convert DC into AC.

Micro Embedded Generation A generator system connected to Powerco's network not exceeding

10kW, either single phase, two phase or three phase.

Modified Sine-Wave A lower cost and usually more efficient type of inverter that outputs a trapezoid shape waveform rather than sine wave. This type of inverter causes high harmonic distortion making it unsuitable for connection in

parallel with the network.

Net Metering A system used in some countries where no alterations are made to the

Consumer's wiring. The kWh meter is simply run in reverse when generation exceeds the load to offset the Consumer's energy usage.

This practice is illegal in New Zealand.

Network (The) A collective term commonly used as an abbreviation to mean the whole

of the electricity distribution system - i.e., high voltage or low voltage delivery systems. In this document, The Network is taken to mean Powerco's network (or Powerco's works as defined in the Electricity Act

1992).

RCD Residual Current Device. A type of circuit breaker that is triggered by

30mA of current flowing back through earth.

Service Main For the purposes of this standard a Service Main has the meaning as

defined in the (now revoked) Electrical Supply Regulations 1984, namely; "...that portion of an electric line between the distribution line (i.e., the Distributor's supply system) or distribution main as the case may be, and the Consumer's main switchboard and which is used

exclusively to supply electricity".



1.6 Risk Identification and Management

A systematic method of identifying all risks shall be applied to all design, construction, maintenance and operation activities undertaken on Powerco's networks, generally as required by Powerco's 100R001 Risk Management Charter. Appropriate risk elimination, mitigation or reduction methods shall be implemented before work commences on any network asset.

1.7 Copyright

The copyright of this publication is the property of Powerco Limited. No part of this publication may be reproduced by photocopying or by any other means without the prior written permission of Powerco Limited.

1.8 Document Owner

Contact Person: Chief Engineer



2 SYSTEM REQUIREMENTS

2.1 Inverters and Installation Requirements

Inverters used for micro embedded generation differ from those usually available for consumer electronics.

Although low cost inverters intended for use in caravans, motor homes or boats are readily available, they are not suitable for grid-tied generation applications.

Inverters labelled as "grid-tied" and conforming to AS/NZS 4777 shall be used in order for the generation system to meet the performance and protection requirements deemed as necessary to connect to the Powerco network.

Installation requirements shall comply with AS/NZS 4777.1:2016, and that inverters shall comply with AS/NZS 4777.2:2020.

While this document describes the process for installations up to 10kW nameplate rating, note that Clause 2.3 of AS/NZS 4777.1:2016 includes the paragraph:

"Unless specifically stated by the distributor, the rating limit for a single-phase IES (Inverter Energy System) in an individual installation shall be equal to 5 kVA, and a multi-phase IES shall have a balanced output with respect to its rating with a tolerance of no greater than 5 kVA unbalance between any phases."

In other words, the maximum single-phase connection is 5kVA, and above this a two-phase or three-phase connection is required, noting the 5kVA unbalance limit between phases.

It is strongly recommended that installers estimate the export capability at the customers installation to transport generated energy to the distribution network within acceptable voltage constraints. Higher levels of network voltage and impedance can result in export constraints. These conditions could lead to the inverter tripping on high voltage. Appendix E describes a method, including voltage and impedance checks, to determine installation export capability.

2.2 Operational Modes and Grid Protection Devices

It is recommended that the inverter have operational modes for both Volt-Watt and Volt-Var responses enabled. These response modes shall be the New Zealand based settings as per Clause 3.3.2 of AS/NZS 4777.2:2020.

Grid Protection Devices shall be installed to ensure that the inverter is isolated from the network in the event of an outage.

This is an important safety feature preventing the local LV network from being livened after it has been isolated further upstream which poses a risk to personnel. Grid protection devices are usually incorporated into the inverter and must meet AS/NZS 4777.2 specifications for anti-islanding and reconnection.

Powerco's Minimum requirements are:

- Operate and auto-isolate on under voltage and over voltage limits for the delay and trip times described in Table 4.1 of AS/NZS 4777.2:2020;
- Operate and auto isolate on under frequency and over frequency limits for the delay and trip times described in Table 4.2 of AS/NZS 4777.2:2020;
- At least 1 method of active anti-islanding protection;



- Reconnection delay of at least 1 minute after normal grid supply is established, refer to Clause 4.7 of AS/NZS 4777.2:2020;
- Settings must be password or lock protected;
- Total Harmonic Current Distortion less than 5%; and
- Inverter power factor must be consistent with the Volt-Var mode of operation, refer to Clause 3.3.2.3 of AS/NZS 4777.2:2020.

2.3 Overvoltage Protection

In addition to the Operational Modes and anti-islanding protection specified in section 2.2 *Grid Protection Devices*, Powerco requires protection against the generation causing excessive voltage at the network point of connection. New Zealand legislation states the allowable voltage range at LV customer's points of supply (POS) is 230 volts +/- 6%, or 216.2 to 243.8 volts. However, inverters can only measure the voltage at their terminals, and the voltage there is different from the POS voltage due to voltage drops / rises across the impedance between POS and the inverter terminals.

In order to safe guard against potential damage to consumer appliances the following is required:

- Inverter over voltage trip levels V_{nom-max}, refer Clause 4.5.2 of AS/NZS 4777.2:2020, shall be set to 249 volts.
- When the average voltage at the inverter terminals exceeds V_{nom-max} for a 10 minute period disconnection shall occur within 3 seconds of this limit being exceeded.
- Reconnection shall not occur until the conditions listed in Clause 4.7 of AS/NZS 4777.2:2020 have been met for at least 60 seconds.

2.4 Metering

The Energy Retailer may require a new kWh meter to be installed in an existing installation – usually replacing the current import meter.

The meter will measure energy imported and exported to and from the premises separately and must meet Electricity Industry Participation Code, Part 10, requirements for metering. Further information about metering should be obtained from the energy retailer.

The Consumer shall provide Powerco (at Powerco's request) interval data and cumulative data recorded by those meters.

2.5 Access

The Consumer shall provide Powerco, or a Powerco authorised service provider safe and unobstructed access to the generation site and all upstream equipment at all reasonable times, providing:

- Access is required for matters concerning the generation circuit and its connection to the Powerco network:
- Powerco shall make a written request to the Consumer to access the site for scheduled works;



- Powerco, or a Powerco authorised service provider may not interfere with the Consumer's equipment without their express permission. This does not include methods of isolation or the confirmation of inverter settings;
- Powerco may require immediate access to the Consumer's equipment in the event of an emergency (i.e., to prevent a breach of safety or damage to property). Powerco shall inform the Consumer of the circumstances and events as soon as practicable.

2.6 Interruptions / Temporary Disconnection from the Network

Powerco may, from time to time, isolate any embedded generation in order to perform certain maintenance tasks or manage the network capacity in accordance with the requirements of Powerco's 173S003 *Distributed Generation (DG) Policy*.

2.7 Permanent Disconnection

Permanent disconnection of the ICP should comply with the requirements of Powerco's 170S001 Permanent Disconnections - Electricity Network - Policy.

Permanent disconnection of the embedded generator circuit only shall include:

- The Consumer informing their Energy Retailer of the disconnection;
- At least one device (circuit breaker, etc) must be removed from the embedded generator circuit to give physical disconnection;
- The remaining circuit, if any, must be "made safe" as per the provisions of AS/NZS 3000: Wiring Rules;
- All signs and labels shall be removed from the Consumer's service fuse (at point of network connection) by Powerco or an authorised Powerco service provider.

2.8 Signs or Labelling

It is the Consumer's responsibility to ensure that the generating circuit is clearly labelled on the main switchboard and any sub-main switchboards it passes through.

A label shall be placed on the Consumer's service fuse as a reminder to test and prove that the circuit is de-energised before carrying out any work on the Consumer's service main.

Refer to 4.2 Appendix B: Warning Tags for DG Circuits for examples of signs and labels.

2.9 UPS Installations

Generation may be used in conjunction with batteries to provide an uninterruptible power supply (UPS) for certain circuits within the premises.

In this instance, no protection device shall interrupt the neutral or earth conductors between the network and the inverter.

This prevents the use of residual current devices (RCD's) between the inverter and the network.



3 THE CONNECTION PROCESS

3.1 Consumer Application for Connection

The Consumer must make an application in writing to Powerco about the connection of embedded generation in accordance with the requirements of Powerco's 173S003 Distributed Generation (DG) Policy.

The application must include the following information:

- Location i.e., the physical address of where the generation is to be installed and ICP number:
- Contact details of both the owner and installer of the equipment;
- The invoicing address for the application fee;
- Whether the DG installation is new or an increase to existing capacity;
- The part of the EIPC that the application is made under;
- The Energy Retailer at the DG site;
- Power the maximum AC generation (number of phases and amps per phase) that will be injected;
- Type the type of AC commutation device e.g., electronic inverter, AC induction, synchronous, etc;
- Technical Details including, inverter make and model, compliance with AS/NZS 4777.2:2020, if Volt/ VAR and Volt/Watt response modes are enabled, compliance with Clause 2.2 and 2.3 of this standard, typical load at connection point, measured voltage at the switchboard, if the installation has battery storage and loop impedance;
- Schematic diagram distinctly showing the relevant existing circuits and the intended generation; and
- The intended time frame for connection.

3.2 Approval Process

The approval process shall begin once the Consumer has supplied satisfactory information about the intended connection to Powerco as detailed in Section 3.1 above.

3.3 Retailer Contractual Agreement

The Consumer shall achieve an agreement with their Energy Retailer for the export of energy.

3.4 Connection

The Consumer must provide a Certificate of Compliance and a completed commissioning test statement to Powerco, signed by the registered electrician installing the embedded generation or a licensed inspector verifying that the installation complies with the requirements of Powerco's *Electricity Network Connection Standard (393S007)* plus all other network requirements and is electrically safe (i.e. the installation fully complies with the requirements of AS/NZS 3000 – Wiring Rules). The commissioned equipment and settings shall not deviate from the approved application form. Powerco may then approve the plant for connection to The Network.



3.5 After Connection


The Consumer shall provide as-built information including drawings and schematics to Powerco following connection of the embedded generation to the network.




4 APPENDICES

4.1 Appendix A: Wiring Guidelines

The following diagram shows a typical grid tied solar PV array connected through a domestic site. Wiring topologies may vary considerably. Refer to AS/NZS 4777 for more detailed guidelines.

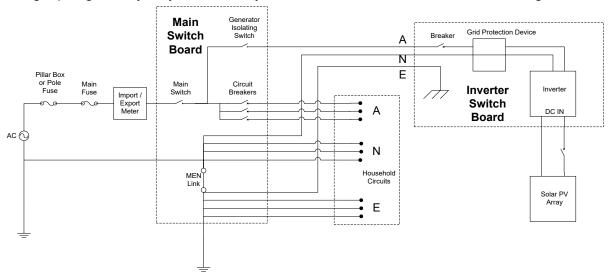

A UPS type system with appliances connected between the inverter and the grid protection device. Note the red lines showing the inverter circuit. In a UPS circuit, no residual current devices shall be placed between the point of supply and the inverter. The same is true for any protection device that breaks the neutral conductor.

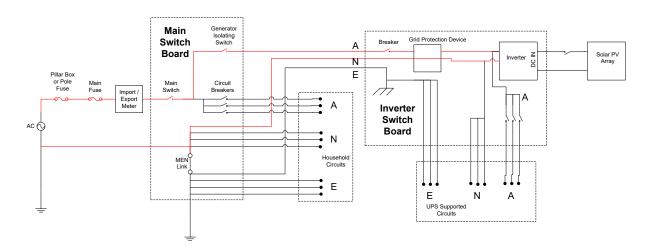



4.2 Appendix B: Warning Tags for DG Circuits

4.2.1 Switchboard Warning Signs

An example sign on the switchboard to which the generator is directly connected:

WARNING

DUAL SUPPLY
ISOLATE BOTH NORMAL AND GENERATOR
SUPPLIES BEFORE WORKING ON THIS
SWITCHBOARD

An example sign on all other switchboards within the installation:

WARNING

DUAL SUPPLY
ISOLATE GENERATOR SUPPLY AT
DISTRIBUTION BOARD DB01

Example stickers to be placed over the generator isolating switch:

SOLAR SUPPLY

4.2.2 Powerco Network Warning Signs

Example tag to be tied to the fuse holder of an underground pillar box or overhead service main connection point.


WARNING

THIS ICP CONTAINS EMBEDDED GENERATION. TEST AND PROVE DE-ENERGISED AFTER ISOLATING.



4.3 Appendix C: Application and Connection Process

Generators Application 10kW or less

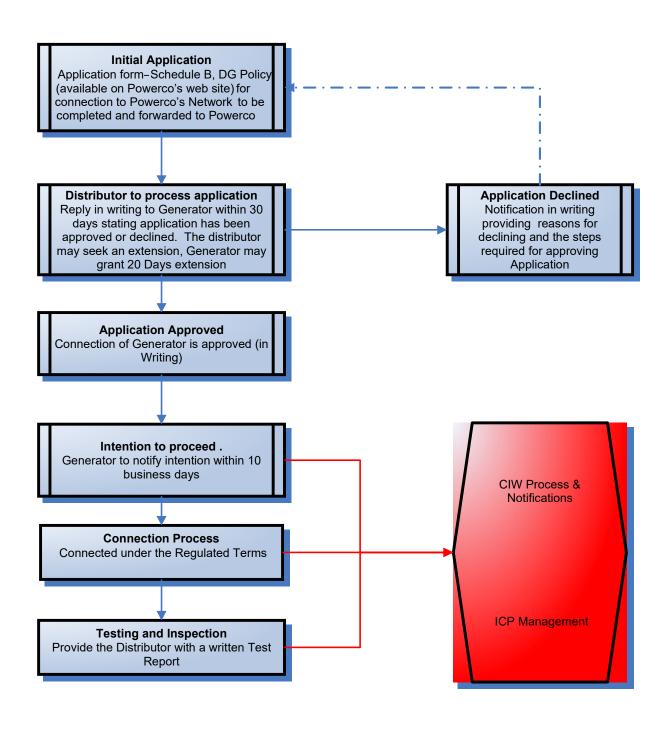



4.4 Appendix D: Connection of Distributed Generation of 10kW or less in total APPLICATION FORM FOR DISTRIBUTED GENERATION UNDER 10kW

Customer's	Name						
contact details (Owner and operator of the	Address	5					
DG)	Tel No.						
	Name						
Installer's contact details	Address	5					
	Tel No.		Email				
Application fee ir address:	nvoice						
Is this a new inst	allation o	or capacity increa	se to existing?		new / capac	ity incre	ase*
This application i	is under	Part 1 or Part 1A	(circle one) of Schedu	ıle 6.1 of	the EIPC (refe	er to clau	ıse 1.1)
Energy Retailer	at DG sit	е					
Proposed conne	ction dat	e: DD / MM /	20YY				
Type of DG (pho	tovoltaic	, wind etc.)					
Maximum AC ge	neration		Number of phases		Amps per ph	ıase	А
Inverter make an	nd model			.			
Inverter complies	s with AS	S/NZS 4777.1&2?	Yes / No*	Any b	oattery storage	e?	Yes / No*
		ICP number					-1
DG connection point Sti		Street address					
Typical load at th	ne propos	sed point of conn	ection:				
Will Volt / Watt re	esponse	mode be enabled	? (this is recommende	d)			
Will Volt / VAR re	esponse	mode be enabled	? (this is recommende	d)			
Does the installa detailed in 393S0			s minimum requireme	nts			
		ply with Powerco 393S089 Clause	s overvoltage protection 2.3?	on			
Division			I	R-N	Ω	R-W	Ω
Phase to neutral inverter wiring			Impedance (including	W-N	Ω	R-B	Ω
		., ,		B-N	Ω	W-B	Ω
Voltage at switchboard							V

^{*(}circle the one that applies)



Declaration		
[the Distributed Generation (DO Network, certify that the above	G) referred to in this Application	
Signed for/by the applicant:		
[insert name and position]		
[insert date]	<u></u>	
For Powerco Use: Network	Approval Confirmation	
Application requirements con	nplete: Yes/No	
Application approved to prog	ress to installation and testing:	Yes/No
Signed:	Date:	
	Network Connection Details	
Zone Substation	Feeder	Distribution Transformer



4.5 Embedded Generation Plant & Commissioning Report

EMBEDDED GENERATION - COMMISSIONING REPORT

		IDEDDED GENERATIO	DIA - OCIVIIVII SSICIALIAG	INLFORT	
Installation te	ested by:				
Date test con	npleted:				
Loss of network supply auto-isolation test proven			,	Yes / No*	
Auto-isolation	n disconnection	speed:		seconds	
Auto-restorat proven	ion if existing a	after specified delay	Yes / No*		
MEN Earth te	est results in Oh	ms:		Ω	
Site Voltage	and time taken	Specify with or without load and with or without generation	V at Load: Yes / No*	HH h mm (time) Generation: Yes / No*	
Volt/VARS er	nabled? (This is	recommended)		Yes / No	
Volt / Watts e	enabled? (This i	s recommended)		Yes / No	
Loop Impeda	nce Test result	5		Ω	
Maximum ex phase	port apparent p	ower (kVA) on each			
Protection s details where		Attach additional			
Electrical inspection to AS/NZS3000:2007 and Electricity (Safety) Regulations 2010 completed				Yes / No	
Name of Elec	ctrical Inspector	:			
(circle the or	ne that applies)			
Other tests re	equested by Po	werco to be specifie	ed:		
				nsed electrical inspector tha accompany this report.	
				ibuted Generation, Powerco neration@powerco.co.nz	
Papart	Name				
Report completed by	Address				
≂y.	Tel No.				



4.6 Appendix E: Determining an installation's export capability / limitations

In order to meet the dual objectives of fair access to the network, and to optimise inverter export capability, Volt-Var and Volt-Watt modes should be enabled and set consistently across all inverters on the LV network.

Check voltage

Measure the phase to neutral voltages at the installation's main switchboard, while the switchboard is unloaded, and at a time when the feeder load is expected to be low.

Record the voltages, the date, and the time.

Advise Powerco the measured voltage at the main switchboard

If any of the voltage readings are 244 volts or above, advise Powerco.

Powerco should investigate the reasons behind the high voltage, e.g.: distribution transformer tap setting, other distributed generation, HV network regulation etc, and remediate.

Determine the supply loop impedance

Measure (or calculate) the phase-neutral and phase-phase supply loop impedances at the installation's main switchboard, while the switchboard is unloaded.

Calculate the expected phase-neutral or phase-phase impedance/s of the cable from the main switchboard to the inverter and add it to the switchboard measured result above.

Record the total loop impedance/s, Loop Z.

Calculate the network impact product (NIP) for the installation

NIP = inverter kVA * Loop Z where:

Inverter kVA is the nominal per phase rating of the inverter

Loop Z is the phase–neutral loop impedance seen by the inverter

Eg: Calculate the Network Impact Product for a two-phase inverter system, rated 4 kVA per phase, connected to a supply which has a 0.5Ω phase-neutral loop impedance.

 $NIP = 4 \times 0.5 = 2$

Check the calculated network impact product against the recommended limit

Inverter configuration	NIP limit (per phase)		
Single-phase			
Two-phase unbalanced	2.4		
Three-phase unbalanced			
Two-phase balanced	3.2		
Three-phase balanced	4.8		

Where the calculated NIP is less than the limit, the inverter voltage control modes should work as expected.

Where the calculated NIP is above the limit, voltage instability may occur at times. Options to improve/remediate this include upgrading the supply (lowering Loop Z), spreading export across more phases (lowering kVA/phase), phase balancing (reduces volt drop effect of neutral conductor).



4.7 DOCUMENT REVIEW HISTORY:

Version Number	Reviewed By.	Review Date	Reason
1	S. Hadley- Jones	24/09/07	First issue of document into BMS
2	M. Smith	14/10/08	Inclusion of references to international standards UL1741 and IEC61727 for inverters to enable approval of all compliant equipment. This does not reduce the requirements of this standard. H&S clause replaced. New Environmental and Hazard ID clauses added. Connection to Powerco network to comply with Powerco standard 393S007 requirements. Definitions of (The) Network and ICP redefined. Minimum requirements for grid tied generation connections defined (clause 3.2).
3	M. Smith	17/6/10	Included process diagram for application and connection. Included Plant and Commissioning Report template. Aligned terminology with 393S012 Small Embedded Generation Standard wherever applicable. Deleted H&S clauses (this standard is about setting technical parameters, not work practices outside Powerco network which are covered by other documents).
4	M. Smith	19/04/11	Updated to reflect legislative changes (Electricity Industry Participation Code 2010 and Electricity (Safety) Regulations 2010)
5	M. Smith	11/05/12	Title renamed (previously called "Micro Embedded Generation Standard"). Updated to align with updated DG Policy.
6	G. Vaughan M. Smith	14/ 3/14	Title changed by deleting "Embedded" and adding "Distributed". New added clause 2.3 Overvoltage Protection to prescribe a maximum voltage for back feeding. s4.4 streamlined Application Form. Included reference to application fee mechanism. Added Powerco Network Approval sign off field.
7	M. Smith	09/04/15	Updated application form to meet EIPC Part 6 requirements.



8	T. Naidoo R. Pittwood	29/07/20	Updated references to Standards to reflect the latest names throughou the document
	Tt. T ILLWOOD		Amended scope as follows:
			Included "under either Part 1 or Part 1A of Schedule 6.1 of the Electricity Industry Participation Code."
			Changed generation up 10kW from "in both single and three phases" to "in total"
			Added "Connection requirements for generators with capacity over 10kW are defined in Powerco's 393S012 <i>Distributed Generation Over 10kW Connection Standard</i> .' to scope
			Removed references to the withdrawn standard AS/ZNS 4777.3
			Changed document owner to Chief Engineer
			Changed 2.1 to Inverters and Installation Requirements
			In section 2.1 clarified the generation limits for single phase systems and multi-phase systems
			4.5 Included Site Voltage, Volt/VARS enabled, Earth Loop Impedance and Maximum Export Power to commissioning report
			Amended postal address for commissioning report and added email address
9	T. Naidoo	23/12/20	Update due to AS/NZS 4777.2:2020 being published
	R. Pittwood		Changed references to AS/NZS 4777.2: from 2015 to 2020
			2.1 Added recommendation that installers investigate the export capability / limitations of customer service networks
			2.2 Added recommendation that both Volt-Watt and Volt-Var response settings are enabled.
			Modified Powerco's minimum requirements in line with AS/ANZ 4777.2:2020 recommendations
			2.3 Modified Voltage and tripping time requirements
			3.1 modified information to be included with the application form
	1		
			3.4 Included "The commissioned equipment and settings shall not deviate from the approved application form"



5

DISTRIBUTED GENERATION UP TO 10KW CONNECTION STANDARD GENERATE - AEN

POWERCO STANDARD - DOCUMENT CHANGE REQUEST

Memo To: Chief Engineer, Junction Street, New Plymouth. **Change Details:** (Attach separate sheets as necessary). **Paragraphs** Affected: **Priority:** Urgent Routine Low (Within 1 week) (Within 12 months) (Next Review) **Date** Submitted By (Print Name) **Document Change Request - Acknowledgement** Dear Thank you for your suggestion regarding changes to the above mentioned document. Your request has been noted and added to our works program. Should we require any additional information regarding your notification then we will be in contact with you. Thank you for your contribution to improving the quality of Powerco's documentation. Regards, Chief Engineer Date

393S089 Ends

Authorised by: GM Asset Strategy and Investment © Powerco Limited 2020